


Hydrostatic control solenoids - Remove – Left-hand side

200 Series Skid Steer Loaders

Electro hydraulic controls


NOTE: This procedure covers how to remove the left hand forward and left hand reverse drive solenoids located on the electro-hydraulic hydrostatic pump.

1. Locate the electro-hydraulic hydrostatic pump (1).

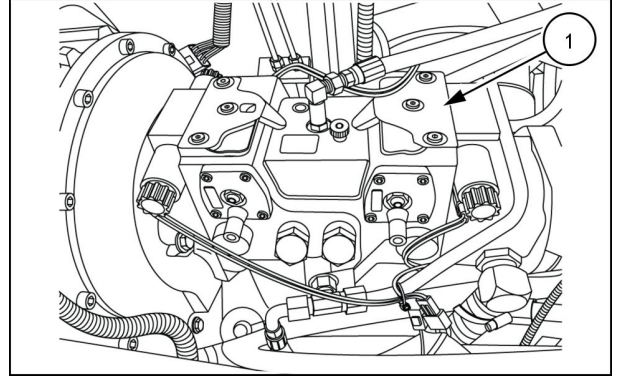


931001814 1

2. Locate the drive solenoid that needs to be removed. The left hand forward (1) and left hand reverse (2) solenoids are located near the auxiliary pump.

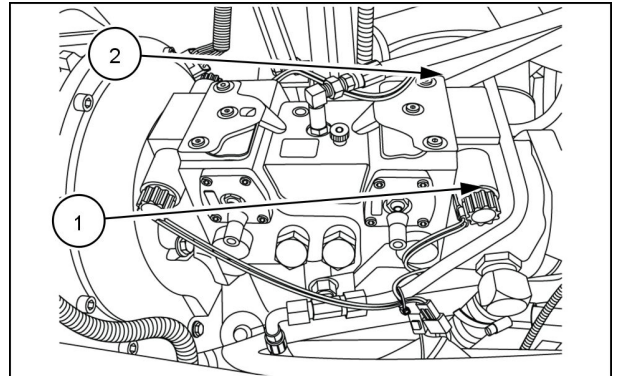

931001814 2


3. Disconnect the connector (1) from the solenoid. Unscrew the cap (2).

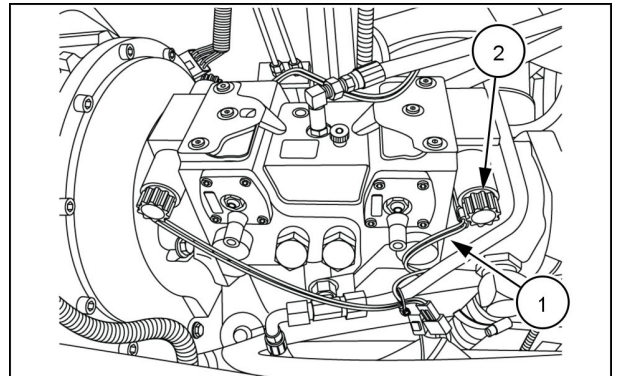

931001814 3

4. Slide the solenoid off.

MAIN POWER DISTRIBUTION

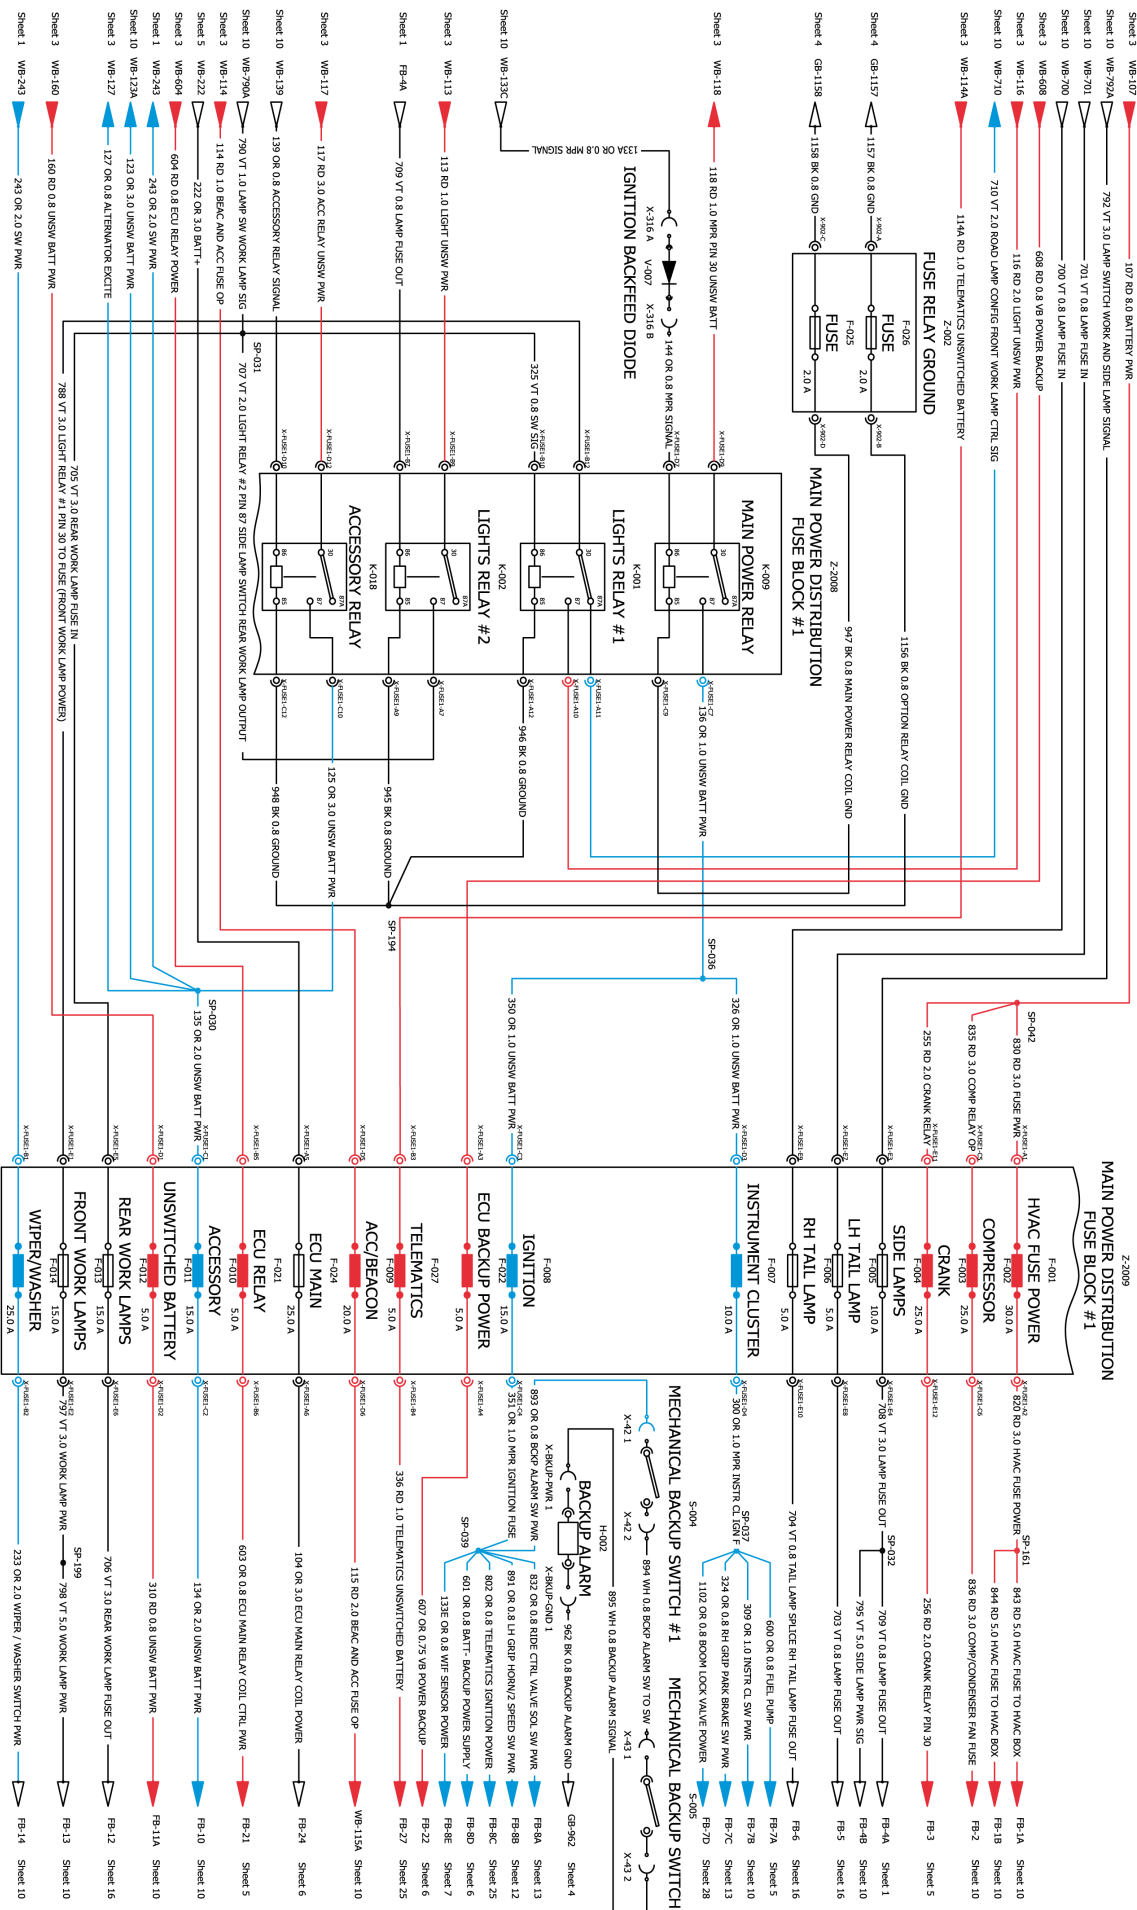

SHEET 1


RAU138SL00000A 1

Wire connectors - Component diagram 03

L218 TIER 4B Final [NDM449275 -]	NA Electro hydraulic controls
L220 TIER 4B Final [NDM456673 -]	NA Electro hydraulic controls

CONNECTOR X-30 - CAB/RH LAMP JUMPER INTERFACE


CONNECTOR X-30 - CAB/RH LAMP JUMPER INTERFACE		
PIN NUMBER	WIRE NUMBER	CIRCUIT REFERENCE
1	798 (VT)	SP-016 X-30CAB/RH LAMP JUMPER INTERFACE
2	793 (VT)	SP-015 X-30CAB/RH LAMP JUMPER INTERFACE
3	779 (VT)	X-30CAB/RH LAMP JUMPER INTERFACE SP-019
4	926 (BK) 939 (BK)	X-30CAB/RH LAMP JUMPER INTERFACE SP-014 X-30CAB/RH LAMP JUMPER INTERFACE SP-173

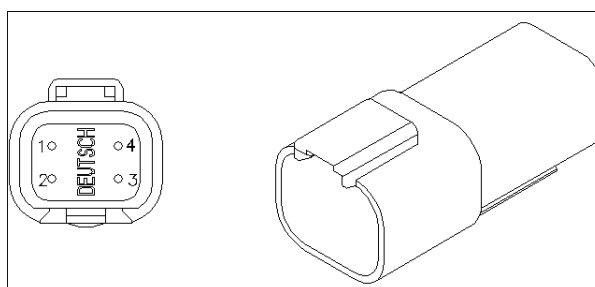

87694154 1

CONNECTOR X-31 - CAB/LH LAMP JUMPER INTERFACE

CONNECTOR X-31 - CAB/LH LAMP JUMPER INTERFACE		
PIN NUMBER	WIRE NUMBER	CIRCUIT REFERENCE
1	799 (VT)	SP-016 X-31CAB/LH LAMP JUMPER INTERFACE
2	794 (VT)	X-31CAB/LH LAMP JUMPER INTERFACE SP-015
3	773 (VT)	SP-018 X-31CAB/LH LAMP JUMPER INTERFACE
4	927 (BK)	X-31CAB/LH LAMP JUMPER INTERFACE SP-026

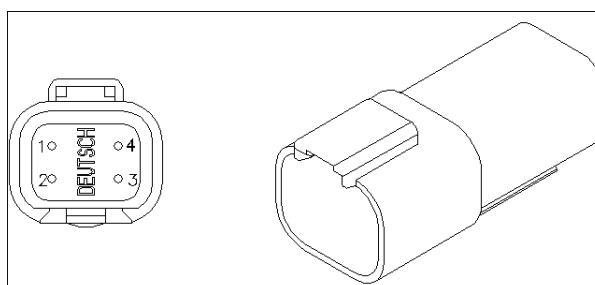

87694154 2